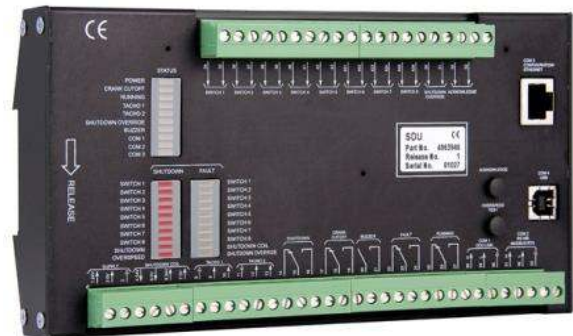

User's Manual

Marine Pro.

**SDU 410
Safety Unit**



**auto
MASKIN**

User's Manual

for

SDU 410 – Safety Unit

~~~

Revision            1.1  
Revised            December 12, 2016

### Revision history:

| Rev. | Date       | Description                                                      |
|------|------------|------------------------------------------------------------------|
| 1.0  | 09.2010    | Initial Release Revision                                         |
| 1.1  | 12.12.2016 | Updated according to FW 1.48 in addition to other minor changes. |

**Copyright** © 2016 by Auto-Maskin AS.

All rights reserved. No part of this document may be reproduced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Auto-Maskin AS.

# Table of Content

|                                            |          |
|--------------------------------------------|----------|
| <b>DOCUMENT INFORMATION .....</b>          | <b>1</b> |
| ABOUT THIS MANUAL.....                     | 1        |
| <i>Valid Versions .....</i>                | <i>1</i> |
| <i>SDU 410 Safety Unit .....</i>           | <i>1</i> |
| <b>INDICATION LED'S .....</b>              | <b>2</b> |
| STATUS LED'S.....                          | 2        |
| SHUTDOWN AND FAULT LED'S.....              | 2        |
| FLASHING AND LIT LED'S .....               | 2        |
| <b>SHUTDOWN CHANNELS .....</b>             | <b>3</b> |
| SWITCH CHANNELS .....                      | 3        |
| PICKUP CHANNELS.....                       | 4        |
| <i>If two channels are being used.....</i> | <i>4</i> |
| <b>SHUTDOWN SITUATIONS .....</b>           | <b>5</b> |
| FROM OVERSPEED .....                       | 5        |
| <i>Shutdown Override.....</i>              | <i>5</i> |
| <i>Indication.....</i>                     | <i>5</i> |
| <i>Acknowledge .....</i>                   | <i>5</i> |
| FROM SWITCH .....                          | 5        |
| <i>Shutdown Override.....</i>              | <i>5</i> |
| <i>Indication.....</i>                     | <i>5</i> |
| <i>Acknowledge .....</i>                   | <i>5</i> |
| <b>RELAYS AND OTHER OUTPUTS .....</b>      | <b>6</b> |
| RELAYS .....                               | 6        |
| SHUTDOWN COIL.....                         | 6        |
| <i>Coil detection.....</i>                 | <i>6</i> |
| <i>Power supply .....</i>                  | <i>6</i> |
| <b>BUTTONS AND OTHER INPUTS .....</b>      | <b>7</b> |
| BUTTONS .....                              | 7        |
| SHUTDOWN OVERRIDE .....                    | 7        |
| ACKNOWLEDGE .....                          | 7        |

## Document Information

### About this Manual

This manual has been published primarily for professionals and qualified personnel. The user of this material is assumed to have basic knowledge in marine systems.

**Note!** Auto-Maskin continuously upgrades its products and reserves the right to make changes and improvements without prior notice.

All information in this manual is based upon information at the time of printing.

For updated information, please contact your local distributor.

### Valid Versions

This User's Manual is valid for the following firmware releases of the SDU 410.

| Firmware | Release       |
|----------|---------------|
| 1.48     | December 2016 |

### SDU 410 Safety Unit

The SDU 410 is the safety module. It can be used standalone, or linked to a DCU engine panel in the 200 Series or 400 Series.

The SDU 410 is mandatory in classed installations that are to be type approved.

When linked to a DCU, the DCU will detect it automatically.

## Indication LED's

### Status LED's

| LED               | Description                                                                                                                                                                                                                                                                             |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| POWER             | <p>Lit when power is applied and above 23V.</p> <p>Flashing if voltage is below 23V.</p> <p>Alarm if voltage is below 23V + 30 seconds. This will activate the buzzer and the Fault relay.</p> <p><b>Note!</b> The SDU will disable all channels if the power supply is below 21 V.</p> |
| LOAD REDUCTION    | LED lit when SDU is in load reduction state. That is, when any of the configured channels are indicating load reduction.                                                                                                                                                                |
| RUNNING           | LED activates when the SDU senses engine speed above configured setpoint, typically 400 rpm.                                                                                                                                                                                            |
| TACHO 1           | LED lit if engine speed above 5 rpm.                                                                                                                                                                                                                                                    |
| TACHO 2           | LED lit if engine speed above 5 rpm.                                                                                                                                                                                                                                                    |
| SHUTDOWN OVERRIDE | The Shutdown Override input channel is activated.                                                                                                                                                                                                                                       |
| BUZZER            | The built-in buzzer is active.                                                                                                                                                                                                                                                          |
| COM 1             | Flashes when the SDU communicates with a DCU engine panel.                                                                                                                                                                                                                              |
| COM 2             | Flashes when the SDU communicates on its Modbus RTU interface.                                                                                                                                                                                                                          |
| COM 3             | Flashes when the SDU communicates on the ethernet interface.                                                                                                                                                                                                                            |

### Shutdown and Fault LED's

| LED        | ACTIVE                                                                               | FAULT                                                                    |
|------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
| SWITCH 1-8 | Lit when in load reduction or shutdown.                                              | Lit when channel wiring is faulty.                                       |
| SHUTDOWN   | Lit for any shutdown situation.                                                      | Lit if the Shutdown Coil output detects a broken coil.                   |
| OVERSPEED  | <p>Lit when in Overspeed.</p> <p><b>Quick flash</b> when in Overspeed Test mode.</p> | Lit if the <b>Shutdown Override</b> input channel detects faulty wiring. |

### Flashing and Lit LED's

|            |                                                     |
|------------|-----------------------------------------------------|
| Flashing   | New and unacknowledged situation.                   |
| Steady Lit | Operator acknowledged, but situation still present. |

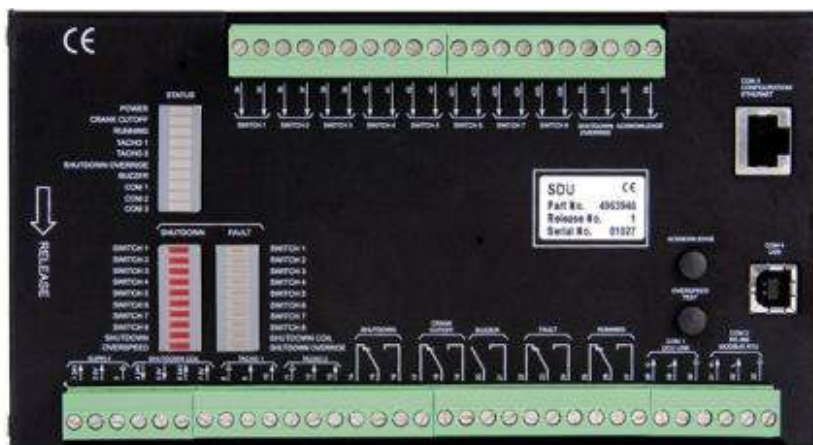
## Shutdown Channels

## Switch Channels

There are eight switch input channels that can initiate a shutdown situation.

Each channel can be configured with the following parameters:

- **On Run Only** keeps the channel from indicating a shutdown while the engine is not running. This is a typical configuration for pressure sensors.
- **Delayed Shutdown** delays the shutdown.
- **Event** can be Disabled, Load Reduction or Shutdown. Event can also be configured as “Shutdown Override #2”.
- **Delay** before shutdown [1 - 60 sec].
- **RPM dependency** makes the channel activate above a certain engine rpm only.
- **Keep enabled on Shutdown Override** makes it possible to keep the channel enabled in a Shutdown Override situation.



## Pickup Channels

There are two pickup channels on the SDU. The unit can be configured to use one or two channels.

When a valid pickup signal is received on either channel, the corresponding LED will be lit.

The LED will be lit when the measured engine speed is above 5 rpm.

### If two channels are being used

If two channels are being used, and the measured engine speed on the two channels are different, then the SDU will be “using” the one that indicates the highest engine speed.

If one of the two channels is missing/faulty while the engine is running, then the LED for the missing channel will flash. This is typically caused by a broken wire. If the SDU is linked to a DCU, then the DCU will issue a warning for this situation.

## Shutdown Situations

### From Overspeed

If either of the two configured engine speed inputs senses an engine speed higher than the configured max setting, then the SDU will activate the common shutdown outputs.

### Shutdown Override

The Shutdown Override input does not disable the Overspeed Shutdown.

### Indication

The red LED OVERSPEED will be lit.  
The red LED SHUTDOWN will be lit.

### Acknowledge

When the engine has stopped, the shutdown can be reset using the Acknowledge button on the SDU.

### From Switch

If either of the switches indicates a shutdown, then the SDU will activate the common shutdown outputs.

### Shutdown Override

Each switch channel may be configured to disregard the Shutdown Override input command.

### Indication

The red LED for the corresponding switch will be lit.

The red LED SHUTDOWN will be lit.

### Acknowledge

When the engine has stopped, the shutdown can be reset using the Acknowledge button on the SDU.



## Relays and other Outputs

### Relays

1 relay is fixed for SHUTDOWN. The other 4 relays are configurable.

| Relay Function     | Description                                                                                                                                       |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| SHUTDOWN           | Activates for any shutdown. Stays activated until engine has stopped, and the operator command the Acknowledge button.                            |
| CRANK CUTOFF       | Activates at the configured Engine Run setpoint, typically 400 rpm.<br><br>Deactivates when the SDU senses that the engine has stopped (<5 RPM).  |
| BUZZER             | Activates for any new shutdown or fault.<br><br>Deactivates when the operator command the Acknowledge button.                                     |
| FAULT              | This is the Common Fault indication.<br><br>Activates for any new fault.<br><br>Deactivates when all faults are acknowledged and has disappeared. |
| RUNNING            | Activates at the configured Engine Run setpoint, typically 400 rpm.<br><br>Deactivates when the SDU senses that the engine has stopped.           |
| OVERSPEED SHUTDOWN | Activates if the SDU senses an overspeed shutdown.                                                                                                |

|                           |                                                                                                                         |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------|
|                           | Deactivates when the engine is stopped and the event is acknowledged.                                                   |
| OVERSPEED TEST MODE       | Activates when the SDU is in overspeed test mode.                                                                       |
| SHUTDOWN OVERRIDE #1      | Activates when the SDU is in shutdown override mode.                                                                    |
| SHUTDOWN OVERRIDE #2      | Activates if any of the channels are configured as "Shutdown Override #2", and at least one of these inputs are active. |
| LOAD REDUCTION            | Activates when in load reduction state.                                                                                 |
| DELAYED SHUTDOWN IMMINENT | Activates when the SDU will perform a shutdown, but the channel has a delayed shutdown configured.                      |

### Shutdown Coil

This output activates for any shutdown.

It deactivates when the engine has stopped + eight (8) seconds.

### Coil detection

The SDU indicates a fault if there is a broken wire in the connected relay coil on terminals 4 and 5.

The coil impedance shall be in the range 300 – 700 ohm.

### Power supply

The Shutdown Coil operates from its own separate power supply on terminals 6 and 7.

## Buttons and other Inputs

### Buttons

| Button         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Acknowledge    | Whenever there is a flashing LED in the SHUTDOWN or FAULT section, this can be Acknowledged by the user by commanding the Acknowledge button.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Overspeed Test | <p>Press and hold until the Overspeed Test LED flashes rapidly.</p> <p>The SDU is now in Overspeed Test mode, where the overspeed setpoint is reduced to 95% of the configured Nominal speed. Now, start the engine.</p> <p><b>Note!</b> If the Overspeed Shutdown has been disabled in the configuration, then this test will NOT generate a shutdown.</p> <p>The Overspeed Test mode is deactivated by either:</p> <ul style="list-style-type: none"> <li>- Performing the test, ending in an Overspeed Shutdown at 95% of the Nominal setpoint.</li> <li>- Pressing the Overspeed Test button again.</li> <li>- Automatic timeout after 5 minutes.</li> </ul> |

## Shutdown Override

Connect a normally open (NO) switch, with a 10k ohm resistor across the two terminal inputs 50 and 51.

When activated by closing the switch, the SDU will disable all shutdown channels, unless those configured specifically to work also in Shutdown Override.

An example of the latter is Manual E-Stop, which shall always work.

## Acknowledge

This is a remote acknowledge input channel, that work exactly as the Acknowledge button.

Connect a normally open (NO) switch, across the two terminal inputs 52 and 53.